


# BBA self priming centrifugal pumps



Type: **B 40 HA+T**

1½" diesel driven trolley mounted

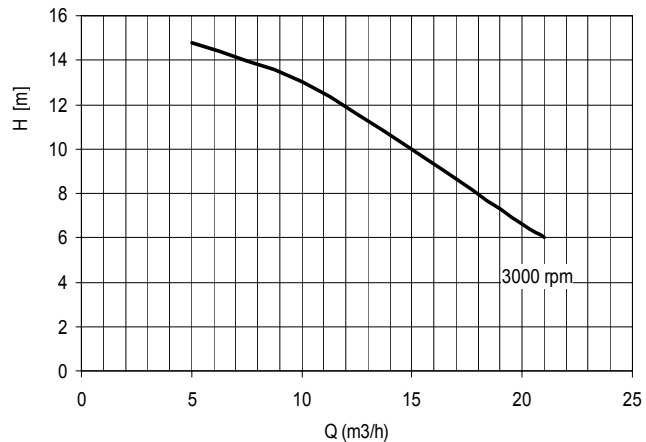

## General:

The BBA self priming centrifugal pump B 40 (1½") is a robust compact contractor pump for handling clean or polluted liquids with flow capacity up to 21 m<sup>3</sup>/h, total head up to 15 m and solid handling of 18 mm.

The construction with open impeller, changeable wear plate and large cleaning covers enables to pump clean or polluted liquids. The mechanical seal is grease lubricated and guarantees a good performance of the pump. This pump can run dry for certain period and needs no food valve for priming up.

The diesel driven B pump on a trailer is suitable for site work application. Built together with a diesel engine the noise level will be 80 dBa at 10m.

## Applications:

This pump system is used for: marine, industry, irrigation, waste water, agriculture and horticulture

## Technical specifications:

### Centrifugal pump:

impeller type	: open impeller
flow max	: 21 m <sup>3</sup> /h
head max	: 15 m
impeller size	: 109 mm
free passage	: 18 mm
req. power	: 1,1 kW
pump speed	: 2900 rpm
max speed	: 2900 rpm
connections	: 1½" BSP

### Materials:

pump casing	: cast iron GG 20 – 0.6020
impeller	: cast iron GG 20 – 0.6020
wear plate	: cast iron GG 20 – 0.6020
impeller	: cast iron GG 25 – 0.6040
pump shaft	: steel C45 - DIN 1.1191
gaskets	: NBR
fixing material	: steel 8.8 el. galvanized
shaft seal	: mechanical seal
seal faces	: T.C. / T.C.
O ring	: Viton

# BBA self priming centrifugal pumps



## Type: B 40 HA+T

1½" diesel driven trolley mounted

### Diesel drive:

diesel motor : Hatz 1B20  
cooling : air cooled  
cylinder : 1 cylinder  
motor power : 2,8 kW at 3000 rpm  
start : rope start  
fuel consumption : max 0,4 l/h  
fuel tank : 5 liter (12 running hrs)  
assembly : compact unit mounted  
on 2 wheel trolley  
noise level : 80 dBa at 10 m

### Dimensions:

l x w x h : 1100 x 600 x 800 mm  
weight : 110 kg



### Optional:

#### electric start

electric start with battery, start box and wiring.



#### 60 liter tank frame

enlarged fuel tank



### How it works:



The rotation of the impeller draws the air present in the suction pipe into the pump casing. The air mixes with the liquid. Liquid and air are transported to the discharge side. The heavier liquid falls back and the air leaves the pump through the discharge outlet. When all the air has been removed from the suction pipe the pump draws the liquid. The built in non-return valve at the suction side prevents the pump casing from being siphoned empty when the pump stops. So immediate re-prime is always possible.

## BBA Pumps BV

Edisonstraat 12, 7006 RD  
P.O. Box 498, 7000 AL  
Doetinchem

## Pumps for results

Tel. (+31) 314 36 84 36  
Fax. (+31) 314 37 84 03

[www.bbapumps.com](http://www.bbapumps.com)  
[info@bbapumps.com](mailto:info@bbapumps.com)